

The system is controlled with a remote control. Think of the remote control as a mobile phone with number keys and call keys. Use the arrow keys and OK to navigate the menu. The system's most commonly used functions are also accessible directly from the remote control.

The **Infra Red (IR) sensor** for the remote control is located in front of the WAVE II /HD Camera. There is also a second IR-sensor located in the front of the Codec itself, which will be automatically enabled if the WAVE II Camera is not connected.



1. Mic Off turns your microphone on and off.
2. Arrow keys are used for navigation in the menu and for moving the camera when the menu is hidden.
3. Volume + and – adjusts the system volume.
4. Layout key. This toggles between full screen and different display layouts.
5. Cancel takes you back one step in the menu system. Also use Cancel to delete characters in an input field.
6. Call key. Press to place a call.
7. Camera presets define specific camera positions. Press and hold a number key for 1 second to save the current camera position to that number key. To activate a preset whilst in a call, simply press and release that number key.
8. Snapshot takes a snapshot of your video. (Only while you are in a call)
9. Presentation key. Switches to a predefined presentation source.
10. OK/Menu. Press to show the menu and to select menu items.
11. Zoom + and – Use this to zoom the camera in and out.
12. Selfview displays your outgoing video. Press Selfview again to turn selfview off.
13. Phone Book. Store and recall your video contacts via the system for easy placement of calls.
14. End Call key Use the red to end the current call. Pressing this key when not in a call will place the system in Standby mode.
15. Number/Letter keys function in the same manner as with a mobile or cellular phone.
16. Touch tones. Select when you are in a call and need to dial extension numbers etc. (instead of presets).